

TRIGGER BOARD INSTALLATION:

- 1) Open the gearbox and remove the stock wiring harness and cutoff lever.
- 2) Move the selector plate to SAFE and install the trigger board into the gearbox. Do not use the cutoff lever screw to secure the board as it will interfere with the sector gear.
 Do not insert the board while the selector plate is in the AUTO position as this will damage the selector switch.
- 3) For proper cycle detection, shim the sector gear as close as possible to the cycle detection switch underneath it, and make sure the sector gear does not grind against the switch's solder joints (too close).
 Be sure to shim BOTH sides of the sector gear otherwise it might slide away from the switch and cause misreads.
- 4) Apply grease to the sector gear's cutoff cam to prevent wear on the cycle detection switch.
- 5) Connect the data cable to the trigger board. Route the data cable and included motor wires through the gearbox as shown in the above diagram. The gearbox can now be closed.
- 6) Cut included the battery and motor wires to the desired length and strip off 4mm of insulation from the wire ends.
- 7) Insert the wire ends as far as possible into the Chimera's wire terminals and firmly tighten the clamping screws.

 Note the polarity markings on the underside of the Chimera. Improper connections will void the warranty.
- 8) Connect the data cable to the Chimera. Tie up excess cable length to reduce clutter if needed.

OPTIONAL:

- The anti-reversal latch can be removed, but may require the motor braking setting to be enabled to prevent gear reversal noises. Also precocking will no longer be possible and therefore need to be kept disabled.

Programming & AEG Stats

WIRELESS CONNECTION:

- 1) Requires a smartphone or tablet which meets the following specs:
 - └ iPhone: 4S or newer models running at least iOS 7.0
 - └ Android: Any with Bluetooth 4.0 or above and running at least Android 4.3
- 2) Search the App Store for "AEG Stats" by BlackTalon Concepts. Install and open the app.
- 3) To scan for and connect to the FET, hold the smartphone or tablet right next to the AEG's motor/grip where the bluetooth signal will be strongest.
 - Note: The FET disables its Bluetooth radio after 10 minutes of inactivity to save power, and will not be scannable in this state. To re-enable the FET's Bluetooth simply fire a shot or reconnect the battery.
- 4) Once connected you can view the stats of the AEG and program the FET. Any term in blue text can be tapped on to display additional information.

PROGRAMMING VIA TRIGGER:

If wireless programming is unavailable the FET can programmed by trigger inputs instead. The guide for this programming method is available seperately on the BTC website.

Troubleshooting

Problem	Checklist
No response on trigger pull AND no motor buzz.	Battery may be completely drained. Try recharging or replacing the battery. Possible short circuit in the wiring. Try running the motor with the FET and wiring entirely outside the gearbox. If the motor now runs then check for any tears in the wiring and insulate any that are found. Data cable may be damaged. Try swapping the data cable with the included spare.
Only fires full auto AND continues firing for 0.5s after trigger is released.	Sector gear not engaging the cycle detection switch. L Shim the sector gear closer to the switch. Make sure to shim both sides of the sector gear so it does not slide away from the switch. Data cable may be damaged. L Try swapping the data cable with the included spare.
Wrong firing mode on one or more selector positions.	Wrong fire modes selected in programming mode. □ Reselect the settings in programming mode or perform a factory reset. Selector plate not fully pressing down the fire select switch. □ Try manually holding/releasing the switch and pull the trigger. If the fire modes are correct then the gears that move the selector plate are misaligned and needs re-adjusting. Data cable may be damaged. □ Try swapping the data cable with the included spare.
Semi fire always cycles twice.	If precock is ON: precock timing is set too high for your setup. Lower the timing setting in programming mode. If precock is OFF: the motor is taking too long to fully stop. Try enabling or increasing the motor braking setting in programming mode. If braking is already ON: the motor is in need of maintenance or replacement. Clean the motor's internals and replace the motor brushes if they are worn down. Replacing the motor with a more powerful one will also improve the braking function.
Stops firing and motor begins to buzz repeatedly.	1 buzz per second: low voltage / gearbox jam / torn wiring / poor wire connection □ Try recharging the battery and make sure voltage monitoring is not set too high. □ Make sure the gearbox is not jammed and has suffient torque to cycle the gearbox. □ Check wires for any torn insulation that might be shorting against the gearbox shell. □ Check battery and motor connectors for any broken solder joints. 2 quick buzzes: digital fuse tripped by high current draw (not due to short circuit) □ Make sure the gears are not shimmed too tightly and motor height is not set too high, otherwise the increased load on the motor would also increase current draw. □ Increase digital fuse setting or use a higher torque gearset or motor. 3 quick buzzes: FET has overheated □ Try disabling or decreasing the motor braking setting in programming mode. 4 quick buzzes: sector gear not engaging the cycle detection switch □ Shim the sector gear closer to the switch. Make sure to shim both sides of the sector gear so it does not slide away from the switch.
Country or playing field requires AEG to be locked to semi-only.	Locate the area on the circuit board with the text "SEMI LOCK" or "SL". Next to this text are two empty solder pads side-by-side. Bridge these two solder pads to lock the AEG to semi-only regardless of the programming settings. Removing the solder bridge will remove the lock.
How to perform a factory reset (and clear app passcode)	 Disconnect the battery from the FET. Hold down the trigger and connect the battery. The motor will emit 4 quick buzzes indicating the FET entered programming mode. Do NOT release the trigger. Continue holding the trigger for 5 seconds until the motor emits a long buzz indicating a successful factory reset. Release the trigger and disconnect the battery to exit programming mode. Additional trigger inputs without exiting programming mode may cause settings to change.

Limited Warranty

BlackTalon Concepts warrants for 3 years after purchase that its products will be free from defects in material and workmanship. BTC will repair or replace any product which is found to be defective under normal use and service, without charge. BTC's obligation to repair or replace shall be the purchaser's sole and exclusive remedy under this warranty.